



*** INSTALLATION PROCEDURE ***
 THERE MUST NOT BE ANY FREE SPACE BETWEEN THE INTERMEDIARY SUPPORTS (OR THE PAN) AND THE LIQUID CEMENT. ALL SECTIONS OF FRAME & SUPPORTS MUST BE "LEVEL" AND FIRMLY SUPPORTED ON ALL THEIR LENGHTS IN ORDER TO AVOID ANY DEFLECTION OVER A LONG TERM PERIOD.

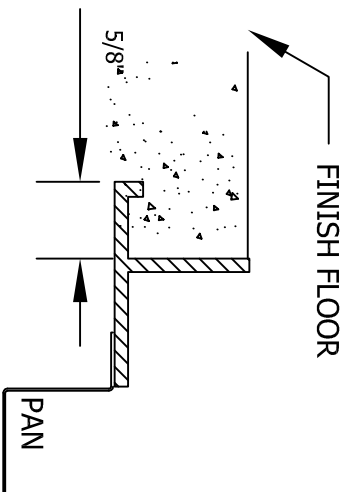

FRAME TYPE V V = INSTALL THE FOOT GRILLE SYSTEMS "SQUARE AND LEVEL" WITH THE FINISHED FLOOR. IT'S IMPERATIVE TO USE A NON SHRINKING GROUT IN SUFFICIENT QUANTITIES (SANDCOAT IS NOT RECOMMENDED). PLEASE ALLOW 2" BIGGER CAUSING BY THE ANCHOR IN THE CONCRETE FOR EASIER INSTALLATION.

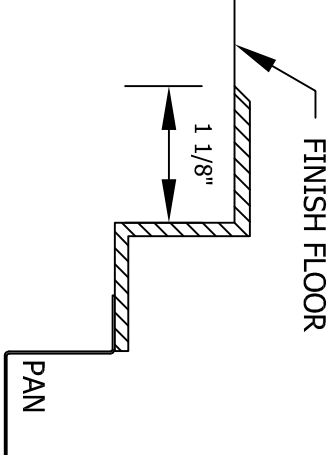

FRAME TYPE T T = IT COMES ABOVE THE FINISHED FLOOR (NOT AT THE SAME LEVEL CAUSING BY THE BEVELLED FRAME). THE CONTRACTOR MUST APPLY THE "CAULKING" ON THE FLOOR BEFORE TO INSTALL THE GRILLE. MAKE 1/2" BIGGER FOR YOUR OPENING. THIS IS RECOMMENDED FOR WOOD FLOOR. THE OVERLAP IS 1 1/8" ALL AROUND X 1/8" THICK.

FRAME TYPE AD = IF CONCRETE FLOOR; INSTALL THE FOOT GRILLE SYSTEMS "SQUARE AND LEVEL" WITH THE FINISHED FLOOR. IT'S IMPERATIVE TO USE A NON SHRINKING GROUT IN SUFFICIENT QUANTITIES (SANDCOAT IS NOT RECOMMENDED). PLEASE ALLOW 1/2" BIGGER FOR THE OPENING. IF WOOD FLOOR (BECAUSE THE CUSTOMER DON'T WANT TO SEE THE OVERLAP FRAME) MAKE THE SAME OPENING BUT DON'T USE CONCRETE; SIMPLY SCREW THE FRAME IN THE FLOOR AT EVERY 6" C/C (SCREWS ARE NOT SUPPLIED). THIS FRAME CAN BE USED WHEN IT'S WALL TO WALL SITUATION.

QUANTITY:

VESTIBULE:

REVISION:

REVISION DATE:

CONTRACTOR:

ARCHITECTS:

DISTRIBUTOR:

BOLAR BLAINVILLE, QUEBEC
<http://www.bolar.com> TEL: (450) 435 7385
 webmaster@bolar.com FAX: (450) 435 3600

PROJECT:

DATE:

DRAWN BY:

APPROVED BY:

PO Nb:

DWG Nb: